

# A510



## PLC - Addendum

- Inputs
- Outputs
- Auxiliary commands
- Special registers
- Counter function
- Timer function
- Analog comparison function
- Operation control function
- summation and subtraction function
- Multiplication and division function

# 1.0 Built-in PLC Function

The PLC ladder logic can be created and downloaded using the TECO drive link software.

## 1.0.1 Basic Command

				P			NO / NC
Inputs					I	i	I1~I8 / i1~i8
Outputs	Q	Q	Q	Q	Q	q	Q1~Q2 / q1~q2
Auxiliary command	M	M	M	M	M	m	M1~MF / m1~mF
Special registers							V1~V7
Counter function	C				C	c	C1~C8 / c1~c8
Timer function	T				T	t	T1~T8 / t1~t8
Analog comparison function	G				G	g	G1~G8 / g1~g8
Operation control function	F				F	f	F1~F8 / f1~f8
summation and subtraction function	AS						AS1~4
Multiplication and division function	MD						MD1~4

### Description of registers

V1: Set frequency	Range: 0.1~1200.0Hz
V2: Operation frequency	Range: 0.1~1200.0Hz
V3: AI1 input value	Range: 0~1000
V4: AI2 input value	Range: 0~1000
V5: Keypad input value	Range: 0~1000
V6: Operation current	Range: 0.1~999.9A
V7: Torque value	Range: 0.1~200.0%
V8: PID Target Value	Range: 0.1~400.0Hz

Command	Upper Differential	Lower Differential	Other command symbol
Differential command	D	d	
SET command			
RESET command			
P command			P


Open circuit		
Short circuit		

Connection symbol	Definition
	Connect components on the left and right side
	Connects components on the left , right and top side
	Connects components on the left , right , top and bottom side
	Connects components on the left , right and bottom side


## 1.0.2 Basic Command Function

### ⊙ D (d) command function

Example 1: I1-D — [ Q1

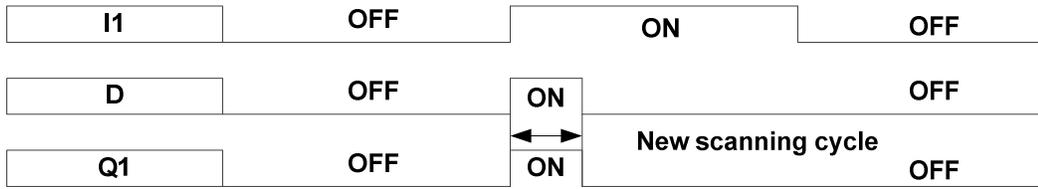


Example 2: i1-d — [ Q1

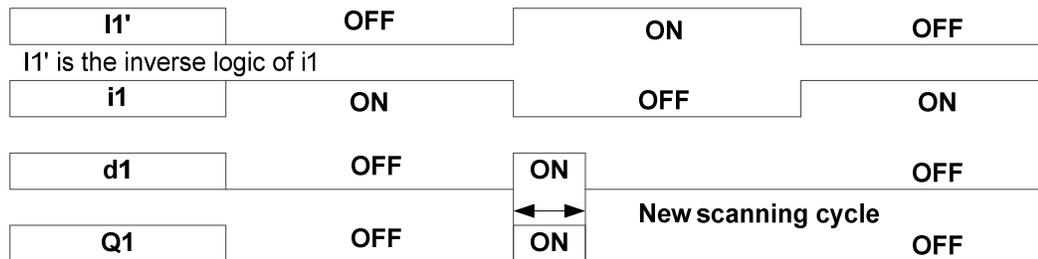


### ⊙ NORMAL( - [ ) output

I1 — [ Q1

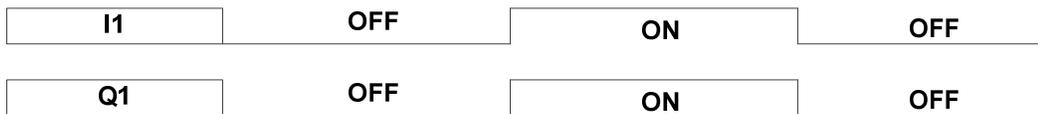


### ⊙ SET ( ^ ) output

I1 — ^ Q1

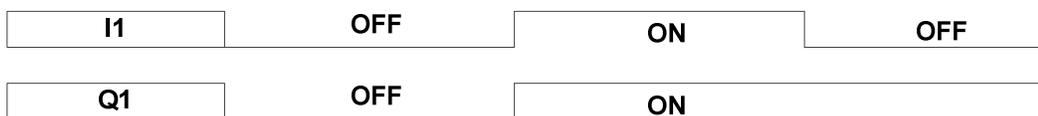


### ⊙ RESET ( v ) output

I1 — v Q1

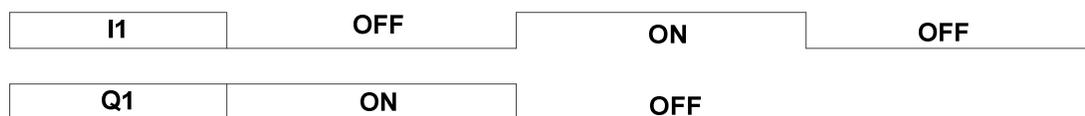


### ⊙ P output

i1 — PQ1

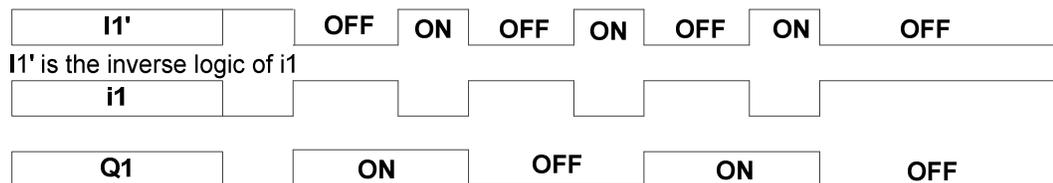

# 1.0.3 Application Functions

## 1: Counter Function

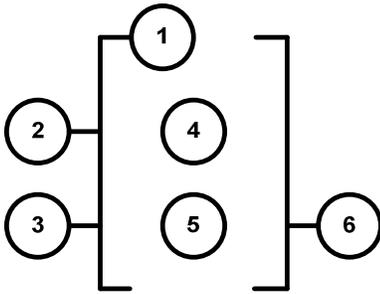

Symbol	Description
①	Counter mode (1 ~ 4)
②	UP/Down counting modes can be set by (I1 ~ f8).
	OFF: Count up (0, 1, 2, 3...)
	ON: Count down (...3,2,1,0)
③	Use (I1~f8) to reset counting value
	ON: Internal count value is reset and counter output ⑥ is OFF
	OFF: Internal counter value retained
④	Internal counter value
⑤	Counter compare value (AS1~AS4,MD1~MD4,T1~T8,C1~C8,V1~V7,constant)
⑥	Counter output (C1 to C8, there are a total of 8 counters)

### Counter modes:

Mode 1: Counter value is locked to the set value. The value will not be retained when the power is cut off.


Mode 2: Counter value is not locked. The value will not be retained when the power is cut off.

Mode 3: Counter value is locked. The value will be retained when the power is cut off.


Mode 4: Counter value is not locked. The value will be retained when the power is cut off.

### Counter mode 1


#### Example:

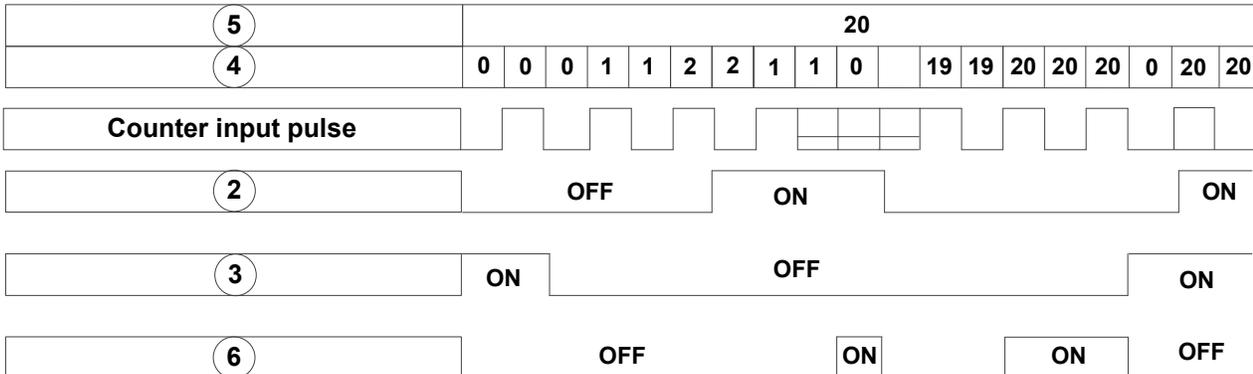


### Input from ladder program

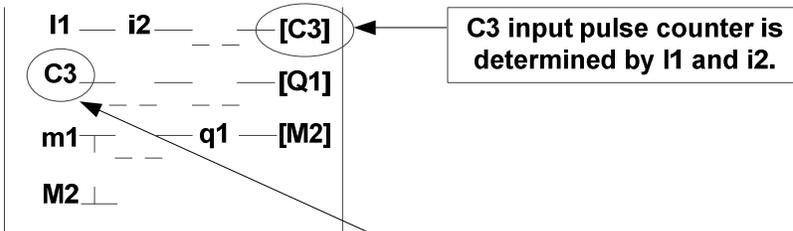

### Input from the function program

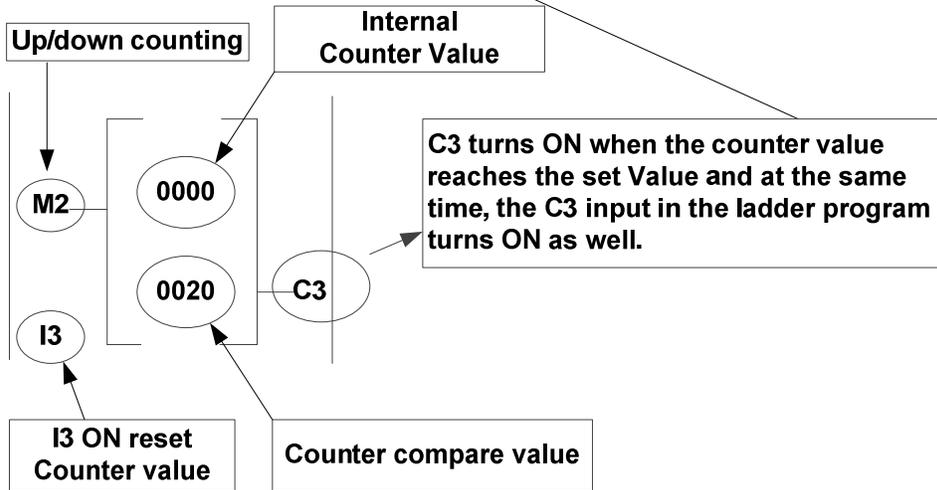


### Counter mode 2

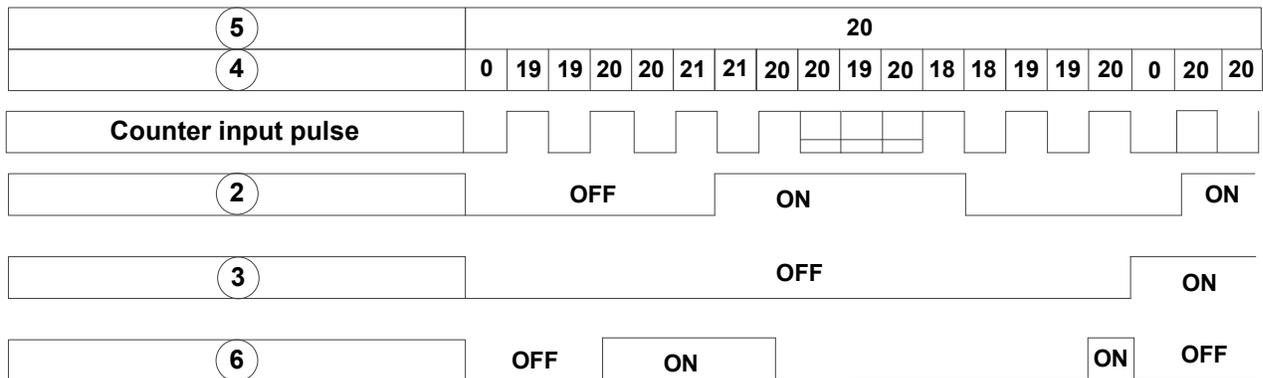


**Note:** In this mode the internal counter may increase past the counter compare value, unlike mode 1 where the internal counter value is limited to the counter compare value.

- (1) Counter mode 3 is similar to the counter mode 1, with the exception that the counter value is saved when the drive is powered down and reloaded at power up.
- (2) Counter mode 4 is similar to the counter mode 2, with the exception that the counter value is saved when the drive is powered down and reloaded at power up.

<b>5</b>		<b>20</b>												
<b>4</b>	<b>Mode 1 &amp; 2</b>	<b>1</b>	<b>1</b>	<b>2</b>	<b>2</b>					<b>0</b>	<b>1</b>	<b>1</b>	<b>2</b>	<b>2</b>
<b>4</b>	<b>Mode 3 &amp; 4</b>	<b>1</b>	<b>1</b>	<b>2</b>	<b>2</b>	<b>3</b>				<b>3</b>	<b>4</b>	<b>4</b>	<b>5</b>	<b>5</b>

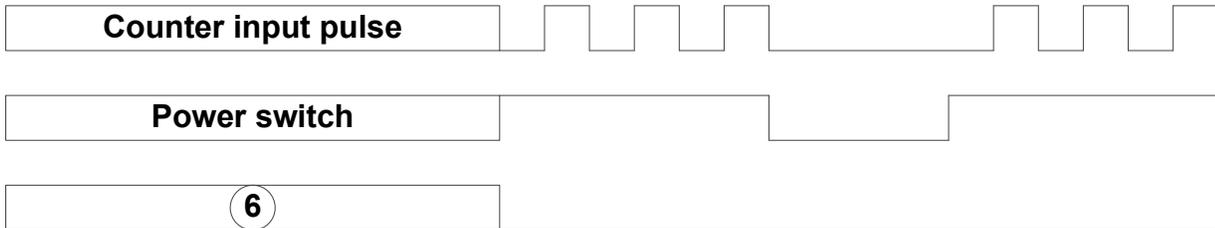


## 2: Timer Function

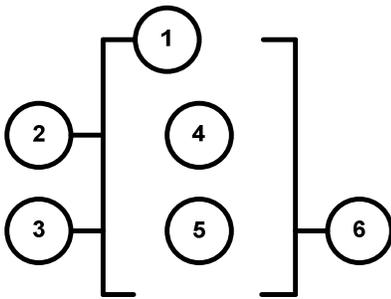


Symbol	Description
①	Timer mode (0-7)
②	Timing unit:
	1: 0.0~999.9 second
	2: 0~9999 second
③	Use (I1~f8) to reset timing value
④	ON: Internal timing value is reset and timer output ⑥ is OFF
	OFF: Internal timer stays running
⑤	Internal timer value
⑥	Timer set value (AS1~AS4,MD1~MD4,T1~T8,C1~C8,V1~V8,constant)
⑦	Timer output (T1 to T8, there are a total of 8 timers)

### Timer mode description:


#### (1) Timer mode 0 (ON-RTC mode)

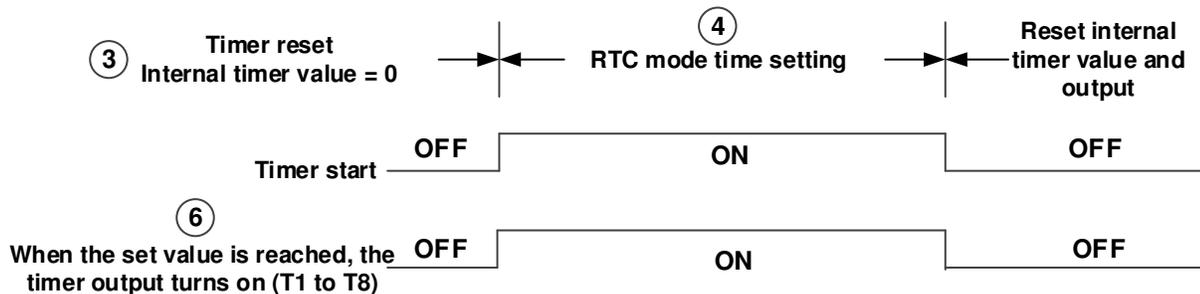


#### (2) Timer mode 1 (ON-delay Timer mode 1)

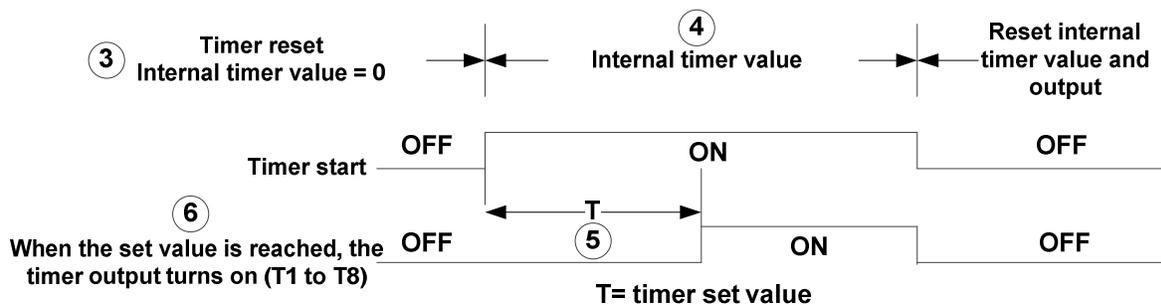


**Example:**

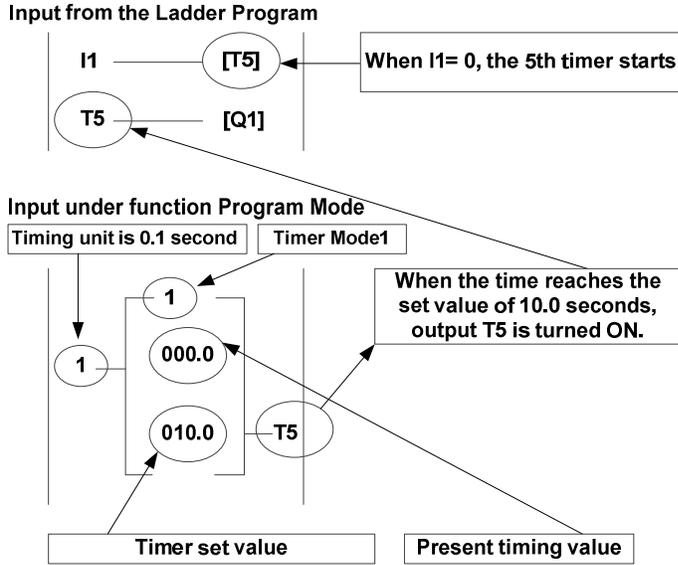


**(3) Timer mode 2 (ON-delay Timer mode 2)**

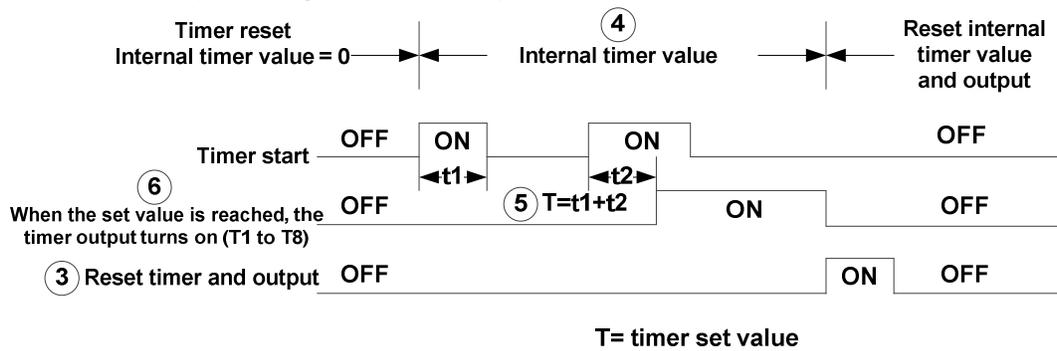


**(4) Timer mode 3 (OFF-delay Timer mode 1)**

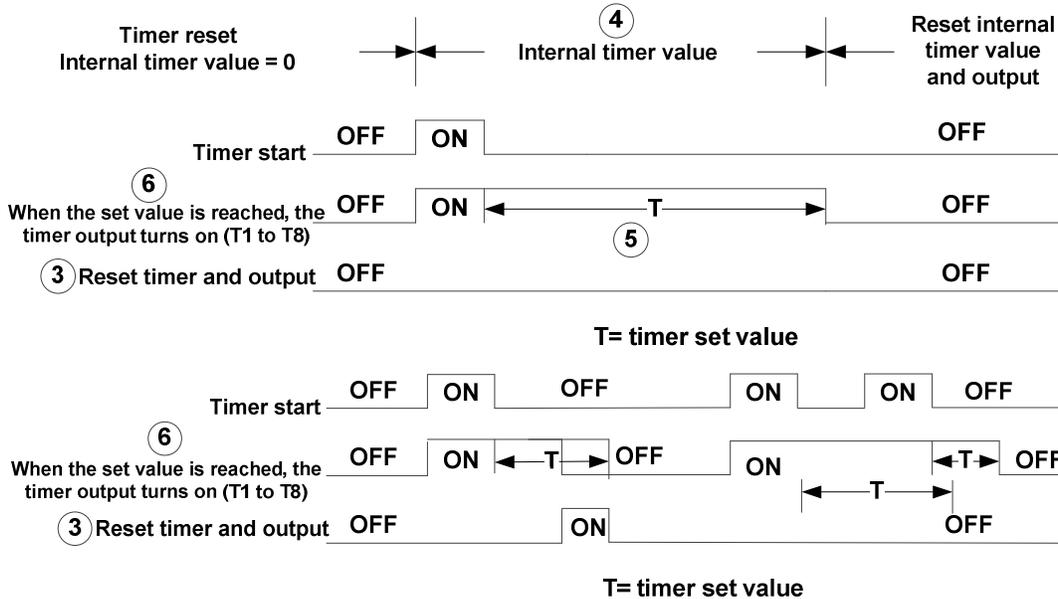


**(5) Timer mode 4 (OFF-delay Timer mode 2)**

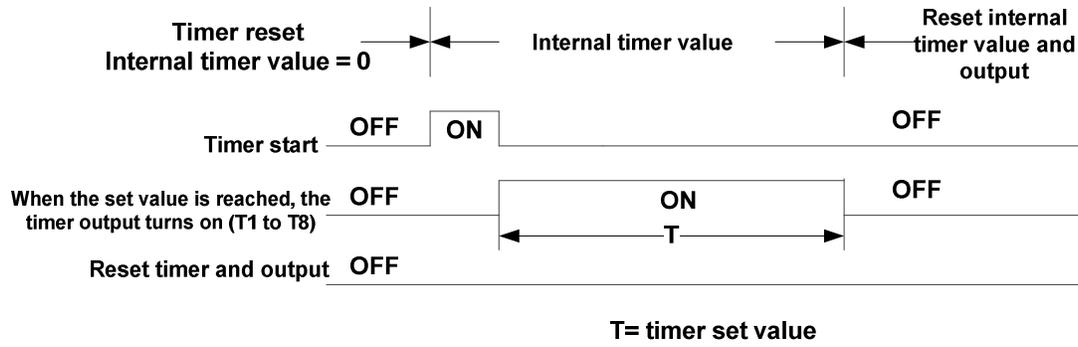


**(6) Timer mode 5 (FLASH Timer mode 1)**

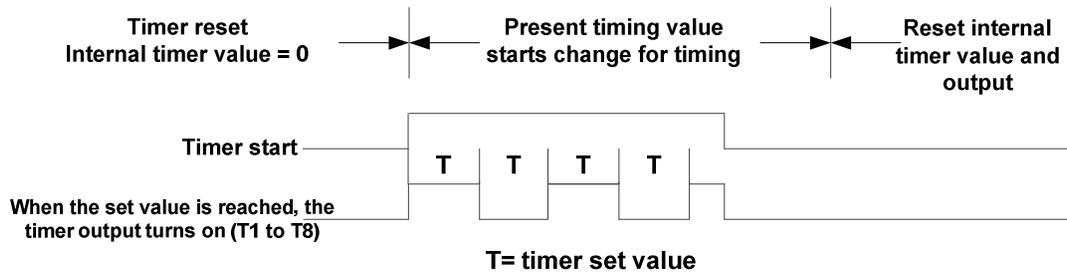


**(7) Timer mode 6 (FLASH Timer mode 2)**

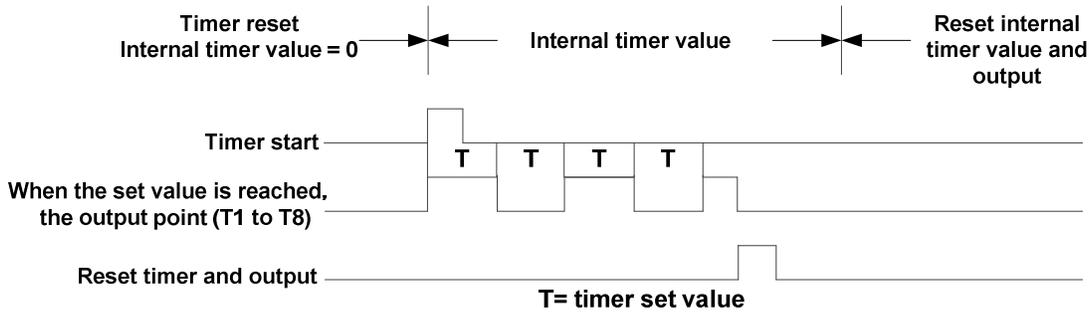

**(8) Timer mode 7 (FLASH Timer mode 3)**

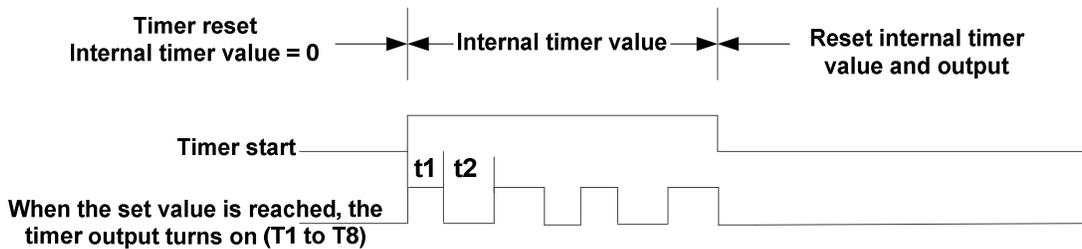

### 3: Analog comparator function

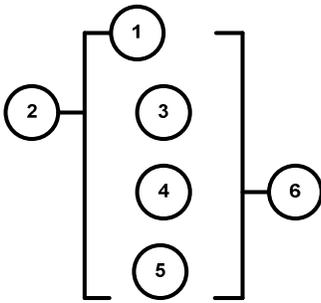

Symbol	Description
①	Analog comparator mode (1~3)
②	Input comparison value selection (AS1~AS4,MD1~MD4,T1~T8,C1~C8,V1~V8)
③	Current analog input value
④	Set the reference comparison value (Upper limit) (AS1~AS4,MD1~MD4,T1~T8,C1~C8,V1~V8, constant )
⑤	Set the reference comparison value (lower limit) (AS1~AS4,MD1~MD4,T1~T8,C1~C8,V1~V8, constant )
⑥	Comparator output (G1 to G8, there are a total of 8 comparators)


#### The description of analog comparison mode:

- (1) Analog comparison mode 1 (③ ≤ ⑤, ⑥ ON)
- (2) Analog comparison mode 2 (③ ≥ ④, ⑥ ON)
- (3) Analog comparison mode 3 (⑤ ≤ ③ ≤ ④, ⑥ ON)

#### Input comparison value selection (V1~V7)

- (1) Input comparison value selection = V1: Set frequency
- (2) Input comparison value selection = V2: Operation frequency
- (3) Input comparison value selection = V3: AI1 input value
- (4) Input comparison value selection = V4: AI2 input value
- (5) Input comparison value selection = V5: Keypad input value
- (6) Input comparison value selection = V6: Operation current
- (7) Input comparison value selection = V7: Torque value
- (8) Input comparison value selection = V8: PID Target Value


#### 4: Operation control function

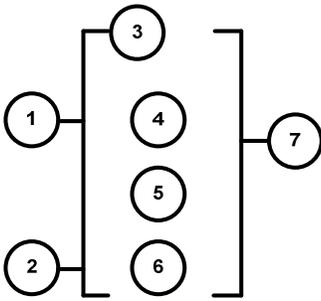


Symbol	Description
①	Forward /Reversal control can be set by ( I1~f8 ) OFF: Forward(FWD) ON: Reversal(REV)
②	Speed terminal control can be set by ( I1~f8 ) OFF: Operation based on ③ set frequency ON: Operation based on frequency of speed ④
③	Set frequency (can be constant or V3、 V4, V5 、 V8 )
④	Speed frequency (can be constant or V3、 V4, V5 、 V8)
⑤	Acceleration time (ACC Time)
⑥	Deceleration time (DEC Time)
⑦	Operation command output (F1 to F8, there are a total of 8 operation control functions)

#### Example:


##### Input from the Ladder Program

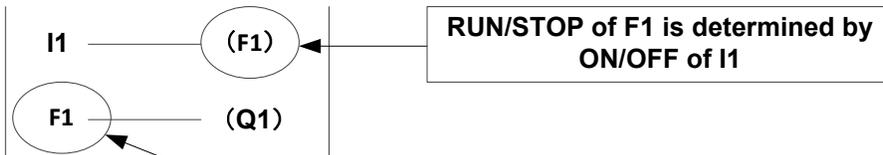

##### Input from Function Program

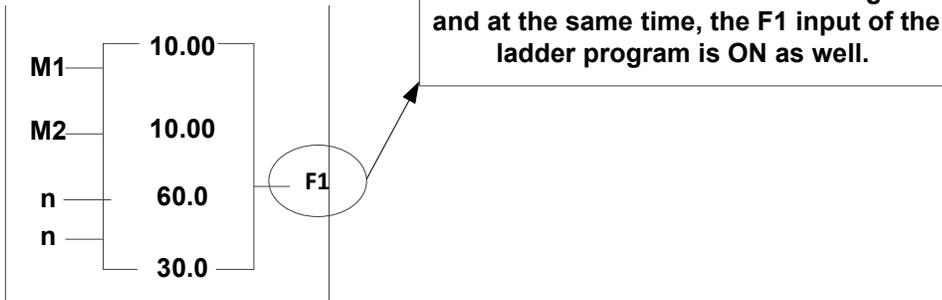


### 5: Summation and subtraction functions

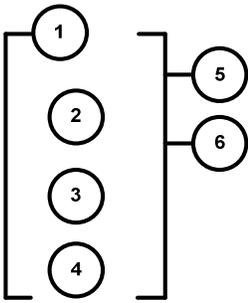

RESULT (calculation result) = V1+ V2- V3

Symbol	Description
①	Calculation result : RESULT
②	Addend V1(AS1~AS4,MD1~MD4,T1~T8,C1~C8,V1~V8, constant )
③	Addend V2(AS1~AS4,MD1~MD4,T1~T8,C1~C8,V1~V8, constant )
④	Subtrahend V3(AS1~AS4,MD1~MD4,T1~T8,C1~C8,V1~V8, constant )
⑤	Coil output of error signal (M1~MF)
⑥	Addition and subtraction modes number (AS1~AS4)

### 6: Multiplication and division modes

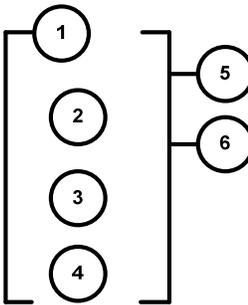

RESULT (calculation result) =V1\*V2/V3

Symbol	Description
①	Calculation result : RESULT
②	Multiplier V1(AS1~AS4,MD1~MD4,T1~T8,C1~C8,V1~V8, constant )
③	Multiplier V2(AS1~AS4,MD1~MD4,T1~T8,C1~C8,V1~V8, constant )
④	Divisor V3(AS1~AS4,MD1~MD4,T1~T8,C1~C8,V1~V8, constant )
⑤	Coil output of error signal (M1~MF)
⑥	Multiplication and division modes number (MD1~ MD4)

**TECO**   **Westinghouse**

---

***INVERTER***

**A510**

Teco-Westinghouse Motor Company  
5100 N. IH-35  
Round Rock, Texas 78681  
1-800-279-4007  
[www.tecowestinghouse.com](http://www.tecowestinghouse.com)

**Distributor**

**Ver 02: 2020.01**